

Lexmark LV Parts Reference Guide



Note 1: Estas partes solo se venden por medio de canales mayoristas de Refacciones Lexmark.

oct-13

CRU: Customer Replaceable Unit / Unidad que puede ser reemplazada por el cliente.

FRU: Field Replaceable Unit; Service Technician Required / Unidad que debe ser reemplazada por un técnico certificado Lexmark.

MODEL	MACH TYPE	CONSUMABLE / WEAR PARTS			FRU/ CRU	Yield (p)
		PN	Included PN	Description (Note 2)		
C500	5023	C500X28G	(Note 1)	Maintenance Kit 110-127V	CRU	60,000
		40X3412		Transfer unit	CRU	120,000
		40X3418		Transfer roller assembly		
		40X3415		Separator Pad		
		40X3414		Paper feed Roller		
C510	5021	C500X28G	(Note 1)	Maintenance Kit 110-127V	CRU	60,000
		56P1651		Transfer Unit	CRU	120,000
		56P1608		Fuser Assembly 110V		
		56P1655		Roller, paper feed		
		40X3418		Transfer roller assembly		
C52x	5022	40X3569		Maintenance Kit 110-127V	CRU	120,000
		40X1401		Transfer Belt Assesmbly	CRU	120,000
		40X3607		Pick arm roll		
C53x	5022	40X3569		Maintenance Kit 110-127V	CRU	120,000
		40X3572		Transfer Belt Assembly	FRU	120,000
		40X3607		Pick arm roll		
C54x	5025			No MK announced for C540, C543 and C544, but C546 MK may be used on each. However, C540 does not use a duplex reference edge guide.		
C546	5025	40X2254		Maintenance Kit 110-127V	FRU	60,000
			40X7562	Fuser 110V		
			40X5403	Image Transfer Unit		
		40X2263		Duplex Reference Edge Guide		
		40X5168		Pick tires		
C73x	5026	40X5093		Fuser Assembly 110V	CRU	100,000
		40X6401		Transport Belt Assembly	CRU	120,000
		40X5152		Pick Arm Roll		
		40X5168		Pick Tires		
C74x	5026	40X8110		Fuser Assembly, 115V	CRU	100,000
		40X8307		Image Transfer Module	CRU	120,000
		40X5168		Pick Tires	FRU	
		40X5152		Pick arm roll	FRU	
C750	5060	12G6496		Maintenance Kit 110-127V	CRU	150,000
			12G6301	Fuser 110V		
		56P1295		ITU Maintenance Kit	CRU	105,000
			56P1296	Image Transfer Unit		
			12G6303	2nd transfer roll		
		40X0070		Pick tire, pick roll assembly (2 per package)		
		56P0528		Feed roller		
C752	5060	12G6496		Maintenance Kit 110-127V	CRU	200,000
			12G6301	Fuser 110V		
		56P2848		Image Transfer Unit Kit	CRU	120,000
		12G6303		2nd transfer roll		
C76x	5060	56P2910		Maintenance Kit 110-127V	CRU	200,000
		56P2848		Image Transfer Unit Kit	CRU	120,000
		12G6303		2nd transfer roll		
		40X0070		Pick tire, pick roll assembly (2 per package)		
		56P0528		Feed roller		
		56P0542		Separation/torque roller		
C77x	5061	40X1831		Maintenance Kit 110-127V	CRU	200,000
		40X0342		ITU Maintenance Kit	CRU	120,000
			40X1958	Transfer Belt		
		40X1678		Second Transfer Roll		
		40X0070		Pick tire, pick roll assembly (2 per package)		
C78x	5061	40X1831		Maintenance Kit 110-127V	CRU	120,000
		40X0343		ITU MK	CRU	120,000
			40X1958	Transfer Belt		
		40X1678		Second Transfer Roll		
		40X0070		Pick tire, pick roll assembly (2 per package)		
		40X2131		Separation Roll		
C792	5062	40X7100		Fuser 110V	CRU	150,000
		40X7103		Transfer Module	CRU	200,000
		40X6104		Pick tire roll		
		40X7178		MPF pick tire roll with wear strips		
C91x	5055	56P9900		Maintenance Kit 110-127V	CRU	105,000
			56P9751	Fuser 110V		
		56P9903		Transfer Belt Maintenance Kit	CRU	120,000
		18A1561		Roller assembly, paper feed		
C920	5056	40X1249		Maintenance Kit 110-127V	CRU	105,000
			40X1056	Fuser 110V		
		40X1041		Transfer Belt Maintenance Kit	CRU	120,000
		40X1077		Pickup roller		
		40X1078		Paper feed roller		
		40X1079		Separator roller		
40X1111		Feed roller (type 2, relay expansion)				
C925	5041	40X6013		Fuser 110V	CRU	120,000
		40X6011		Transfer Belt w/ 2nd roll	CRU	100,000
		40X6372		Paperfeed maintenance kit	FRU	300,000
			40X6179	Feed roll (2)		
			40X6180	Pick roll (2)		
			40X6186	Separator roll (2)		
			40X6580	MPF registration roller		
			40X6581	Standard registration roller		
			40X6579	Paper exit roller		
			40X6578	Multipurpose feeder roll		
			40X6457	Multipurpose feeder (MPF) kit		
	40X6457	Multipurpose feeder (MPF) Maintenance kit	FRU	100,000		
		40X6411		Multipurpose feeder pad holder		
				Multipurpose pad		

C935	5057	40X4032	40X3732 40X3746 40X3745 40X3744 40X3743 40X3742	Maintenance Kit 600K Transfer Belt Unit Assembly Developer Carrier - Cyan Developer Carrier - Magenta Developer Carrier - Yellow Developer Carrier - Black Developer Unit Assembly	FRU	600,000				
		40X4031	40X3747 40X3698 40X3733	Maintenance Kit 110-127V Fuser 110-127V 2nd transfer roll assembly Transfer Belt Cleaner Assembly	FRU	100,000				
		40X0594 40X3711		Feed unit roll kit Multipurpose feeder pick roll kit						
C950	5058	40X7520	40X6805	80K Maintenance Kit Tray Rollers (12)	CRU	80,000				
		40X7550	40X6629 40X6623 40X6712 40X6599 40X6805	110V Maintenance Kit Fuser 110V Belt Cleaner 2nd BTR Suction Filter Tray Rollers (12)	CRU	320,000 320,000 160,000				
		40X7560	40X6610 40X6611 40X6612 40X6609 40X6615 40X6615 40X6615 40X6615 40X6615 40X6624 40X6623 40X6712 40X6599 40X6805	480K Maintenance Kit Cyan Carrier (beads) Magenta Carrier (beads) Yellow Carrier (beads) Black Carrier (beads) Empty Developer Housing Empty Developer Housing Empty Developer Housing Empty Developer Housing Empty Developer Housing Transfer Belt Belt Cleaner 2nd BTR Suction Filter Tray Rollers (12)	FRU FRU FRU FRU FRU FRU FRU FRU FRU FRU FRU FRU FRU FRU	480,000 480,000 480,000 480,000 480,000 480,000 480,000 480,000 480,000 480,000 480,000 160,000				
		Color Multifunction								
		X50x	7100	C500X28G	(Note 1)	Maintenance Kit 110-127V	CRU	60,000		
				40X3412		Transfer unit	CRU	120,000		
				40X3418		Transfer roller assembly	CRU	120,000		
				40X3415		Separator Pad				
				40X3414		Paper feed Roller				
		X54x		40X4702		ADF Pick roll, separator roll assembly				
				40X4703		ADF separator pad				
				No MK announced for X543 and X544, but X546 MK may be used on each.						
				X546	7525	40X2254	40X7562 40X5403 40X2263	Maintenance Kit 110-127V Fuser 110V Image Transfer Unit Duplex Reference Edge Guide	FRU	60,000
						40X5807	40X5471 40X5472	ADF maintenance kit ADF Separator roll ADF Separator pad	CRU	60,000
		X548	7525	40X2254	40X7562 40X5403 40X2263	Maintenance Kit 110-127V Fuser 110V Image Transfer Unit Duplex Reference Edge Guide	FRU	60,000		
40X5807	40X5471 40X5472			ADF maintenance kit ADF Separator roll ADF Separator pad	CRU	60,000				
X560	7105	40X4860		Pick Tires						
		40X4924		Fuser 110V	CRU	100,000				
		40X4868		ADF Maintenance Kit	CRU	100,000				
		40X4862		Transfer Belt Assembly	CRU	100,000				
		40X4865		MPF Separator Roll Kit	CRU	100,000				
X73x	7526	40X4866		MPF Feeder Feed Kit	CRU	100,000				
		40X5093		Feed Roll Kit	CRU	100,000				
		40X6401		Fuser Assembly 110V	CRU	100,000				
		40X5152		Transfer module	CRU	120,000				
		40X5168		Pick Arm Roll						
X74x		40X5187		Pick Tires	CRU	30,000				
		40X5188		ADF separator pad	CRU	120,000				
		40X5189		ADF pick roll assembly	CRU	200,000				
		40X8110		ADF pick pad						
		40X8307		Fuser Assembly, 115V	CRU	100,000				
X772		40X5168		Image Transfer Module	CRU	120,000				
		40X5152		Pick Tires	FRU					
		40X5187		Pick arm roll	FRU					
		40X5188		ADF separator pad	CRU	30,000				
		40X5189		ADF pick roll assembly	CRU	120,000				
X772		40X1831		ADF pick pad	CRU	200,000				
		40X0342		Maintenance Kit 110-127V	CRU	120,000				
		40X0070	40X1958 40X1678	ITU MK Transfer Belt Second Transfer Roll Pick tire, pick roll assembly (2 per package)						

X782	4036	40X1831		Maintenance Kit 110-127V	CRU	120,000
		40X0343	40X1958 40X1678	ITU MK Transfer Belt Second Transfer Roll Pick tire, pick roll assembly (2 per package) Separation Roll	CRU	120,000
X792	7542	40X0070				
		40X2131				
X925	7541	40X7100		Fuser 110V	CRU	150,000
		40X7103		Transfer Module	CRU	200,000
X94x	7510	40X7220		ADF maintenance kit	CRU	120,000
		40X6104		Pick tire roll		
		40X7178		MPF pick tire roll with wear strips		
		40X6013		Fuser 110V	CRU	120,000
		40X6011		Transfer Belt w/ 2nd roll	CRU	100,000
		40X6372		Paperfeed maintenance kit	FRU	300,000
			40X6179	Feed roll (2)		
			40X6180	Pick roll (2)		
			40X6186	Separator roll (2)		
			40X6580	MPF registration roller		
	40X6581	Standard registration roller				
	40X6579	Paper exit roller				
	40X6578	Multipurpose feeder roll				
	40X6457	Multipurpose feeder (MPF) kit				
	40X6457	Multipurpose feeder (MPF) Maintenance kit	FRU	100,000		
	40X6411	Multipurpose feeder pad holder				
	40X6327	Multipurpose pad				
	40X6328	ADF Pick Arm	CRU	200,000		
		ADF Separator Roll	CRU	100,000		
X95x	7558	40X4032		600K Maintenance Kit	FRU	600,000
			40X3732	Transfer Belt Unit Assembly		
			40X3746	Developer Carrier - Cyan		
			40X3745	Developer Carrier - Magenta		
			40X3744	Developer Carrier - Yellow		
			40X3743	Developer Carrier - Black		
			40X3742	Developer Unit Assembly		
			40X4031	Maintenance Kit 110-127V	FRU	100,000
			40X3747	Fuser 110-127V		
			40X3698	Transfer Roll Assembly		
	40X3733	Transfer Belt Cleaner Assembly				
	40X4033	ADF Maintenance Kit	FRU	150,000		
	40X2273	Separation Roll Guide Assembly				
	40X3887	ADF Feed / Pick Roll Assembly				
	40X0594	Feed unit roll kit				
	40X3711	Multipurpose feeder pick roll kit				
X95x	7558	40X7520		80K Maintenance Kit (as needed)	CRU	80,000
			40X6805	Tray Rollers (12)		
		40X7540		160K Maintenance Kit	CRU	160,000
			40X6623	Belt Cleaner		
			40X6712	2nd BTR		
			40X6599	Suction Filter		
			40X6805	Tray Rollers (12)		
		40X7550		110V Maintenance Kit	CRU	320,000
			40X6629	Fuser 110V		320,000
			40X6623	Belt Cleaner		160,000
			40X6712	2nd BTR		
			40X6599	Suction Filter		
			40X6805	Tray Rollers (12)		
		40X7560		480K Maintenance Kit	FRU	480,000
			40X6610	Cyan Carrier (beads)	FRU	480,000
			40X6611	Magenta Carrier (beads)	FRU	480,000
			40X6612	Yellow Carrier (beads)	FRU	480,000
			40X6609	Black Carrier (beads)	FRU	480,000
			40X6615	Empty Developer Housing	FRU	480,000
			40X6615	Empty Developer Housing	FRU	480,000
	40X6615	Empty Developer Housing	FRU	480,000		
	40X6615	Empty Developer Housing	FRU	480,000		
	40X6624	Transfer Belt	FRU	480,000		
	40X6623	Belt Cleaner	CRU	160,000		
	40X6712	2nd BTR				
	40X6599	Suction Filter				
	40X6805	Tray Rollers (12)				
	40X7530	ADF Maintenance Kit	CRU	200,000		
	40X6824	ADF Pick Rollers (2)				
	40X6821	ADF Separation Asm				

Mono Single Function						
1250 / 1255 OPTRA S	4059			No Maintenance Kit		
1620 / 1625 / 1650 / 1855	4059	99A0967	99A0966 99A0179 99A1017 40X4308	Maintenance Kit 110-127V Fuser 110-127V Transfer Roll Charge Roll Assembly Pick Tire / Pick Roll Assembly (Qty: 3)	FRU	200,000
2420 / 2450 / 2455	4059	99A1195	99A1190 99A0179 99A1017 40X4308	Maintenance Kit 110-127V Fuser 110-127V Transfer Roll Charge Roll Assembly Pick Tire / Pick Roll Assembly (Qty: 3)	FRU	250,000
3455 Optra Se	4059	99A1197	99A1192 99A0179 99A1017 40X4308	Maintenance Kit 110-127V Fuser 110-127V Transfer Roll Charge Roll Assembly Pick Tire / Pick Roll Assembly (Qty: 3)	FRU	250,000
E, E+,Es	4026			No Maintenance Kit		
E310 / E312	4044			No Maintenance Kit		
E23X / E33X	4505			No Maintenance Kit		
E120 / E120n	4506			No Maintenance Kit		
E240 / E34X	4511			No Maintenance Kit		
E250, E350, E352, E450	4512	40X2847	40X2800 40X2834 40X2822 56P1820	Maintenance Kit 110-127V Fuser 110-127V Media Exit Guide Assembly Transfer Roll Assembly Paper feed	FRU	120,000
E264 / E363 / E364	4513			(No Maintenance Kit announced, but E46x Maintenance Kit may be used.)		
E250, E35x, E450	4512	40X2847	40X2800 40X2834 40X2822 56P1820	Maintenance Kit 110-127V Fuser 110-127V Media Exit Guide Assembly Transfer Roll Assembly Paper feed	FRU	120,000
E460, E462	4513	40X5400	40X5344 40X5451 40X5364	Maintenance Kit 110-127V Fuser 110V Pick Roll Transfer Roll Assembly	FRU	120,000
M410 / M412	4045			No Maintenance Kit		
T420	4048	56P2036	56P0648 56P0640 56P0643 56P0656	Maintenance Kit 110-127V Fuser 110-127V Charge Roll Transfer Roll Assembly Paper Feed Roll	FRU	200,000
T430	4048	56P2333	56P2330 56P2302 56P2329 56P0640 56P2311 56P2352 99A0394	Maintenance Kit 110-127V Fuser 110-127V Rear Cover Assembly Transfer Roll Charge Roll Lower MPF Housing Assembly Tray 1 Paper Feed Roll Lubricant Nyogel 744	FRU	200,000
		56P0660 56P2352 56P2359		Paper guide roller Paper feed roll MPF pick roll assembly		
T52x	4520	99A2420	99A2423 99A1015 40X4308 99A1017	Maintenance Kit 110-127V Fuser 110-127V Transfer Roll Assembly Pick Roll Assembly (Qty:3) Charge Roll Assembly	FRU	250,000
T61x	4069	99A1970	99A1969 99A1015 99A1017 40X4308	Maintenance Kit 110-127V Fuser 110-127V Transfer Roll Assembly Charge Roll Assembly Pick Tire / Pick Roll Assembly (Qty: 2)	CRU	300,000
T614, T616	4069	99A1978	99A1977 99A1015 99A1017 40X4308	Maintenance Kit 110-127V Fuser 110-127V Transfer Roll Assembly Charge Roll Assembly Pick Tire / Pick Roll Assembly (Qty: 2)	CRU	300,000
T620	4069	99A2408	99A2402 99A1015 99A1017 40X4308	Maintenance Kit 110-127V Fuser 110-127V Transfer Roll Assembly Charge Roll Assembly Pick Roll Assembly (Qty: 3)	CRU	300,000

T622	4069	99A2411	99A2405 99A1015 99A1017 40X4308	Maintenance Kit 110-127V Fuser 110-127V Transfer Roll Assembly Charge Roll Assembly Pick Roll Assembly (Qty: 3)	CRU	300,000
T630, T632	4060	56P1409 99A0076 99A0405 99A1054	56P2542 99A0179 99A1017 40X4308	Maintenance Kit 110-127V Fuser 110-127V Transfer Roll Assembly Charge Roll Assembly Pick Roll Assembly (Qty: 2) Pick roll assembly Pick arm assembly Pick Arm Assembly	FRU	300,000
T634	4060	56P1855 99A0076 99A0405 99A1054	56P2545 99A0179 99A1017 40X4308	Maintenance Kit 110-127V Fuser 110-127V Transfer Roll Assembly Charge Roll Assembly Pick Roll Assembly (Qty: 2) Pick roll assembly Pick arm assembly Pick Arm Assembly	FRU	300,000
T64x	4061	40X0100	40X2592 40X0127 40X0130 40X4308	Maintenance Kit 110-127V Fuser 110-127V Charge Roll Assembly Transfer Roll Assembly Pick Roll Assembly (Qty: 2)	FRU	300,000
T65x	4062	40X4724	40X4418 40X5852 40X1886 40X4308	Maintenance Kit 110-127V (Type 1) Fuser 110-127V Charge Roll Assembly Transfer Roll Assembly Pick Roll Assembly (Qty: 2)	CRU	300,000
W812	4022	56P0884 56P0838 56P0841 56P0847 56P0878		Maintenance Kit 110-127V MPF Separator Pad Assembly MPF Pick Roll Assembly Tray 1 Pick Roll Assembly, Transfer Roll Assembly	CRU	100,000
W820	4025	12G4182 12G4029 12G4072 12G4148 12G4172	12G4184 40X0594 12G4062	Maintenance Kit 110-127V Fuser 110-127V Paperfeed Rollers (Qty: 3) Transfer Roller Assembly Feeder assembly Paper Transport assembly Transport assembly Transport Roller assembly	CRU	300,000
W840, W850	4024	40X0956 40X0603 40X0605 40X1387	40X0647 40X0594 40X0616	Maintenance Kit 110-127V Fuser 110-127V Paperfeed Rollers (Qty: 12) Transfer Roller Assembly Multipurpose feeder pick roll kit MPF transport roll kit Transport roll kit	CRU	300,000

Mono Multifunction						
X203, X204	7011	40X2822 40X4731 40X1334		Transfer roll assembly Pick Arm Assembly Paper exit guide assembly		
X340 / X342	7003	40X4194 40X2822 40X4731 40X1334 40X2401 40X2404		Fuser assembly, 110V Transfer roll assembly Pick Arm Assembly Paper exit guide assembly ADF pick roller assembly ADF Pick roll pad		
X264, X363, X364	7013	40X5344 40X5807	40X5471 40X5472	Fuser Assembly 110V ADF maintenance kit ADF Separator roll ADF Separator pad	FRU CRU	120,000 60,000
X46x	7014	40X5400 40X5807 40X5440 40X5451	40X5344 40X5451 40X5364 40X5471 40X5472	Maintenance Kit 110-127V Fuser 110V Pick Roll Transfer Roll Assembly ADF maintenance kit ADF Separator roll ADF Separator pad Tray 2 paper feed tires Paper feed, ACM tires	FRU CRU	120,000 60,000
X64x	7002	40X0100 40X0450 40X0066 40X3246 40X0076	40X2592 40X0127 40X0130 40X4308 40X4656 40X0453	Maintenance Kit 110-127V Fuser 110-127V Dual Charge Roll Assembly Transfer Roller Assembly Pick Tire / Pick Roll Assembly (Qty: 2) ADF Maintenance Kit Paper Feed ADF Pickup Assembly Pick arm assembly - 500-sheet Pick arm assembly - 500-sheet Pick roll assembly	FRU CRU	300,000 120,000
X65x	7462	40X4724 40X4769 40X0127 40X1883 40X6406	40X4418 40X5852 40X1886 40X4308 40X4540 40X4605	Maintenance Kit 110-127V (Type 1) Fuser 110-127V Charge Roll Assembly Transfer Roll Assembly Pick Roll Assembly (Qty: 3) ADF maintenance kit ADF feed / pick roll assembly ADF separator roll and guide Dual Charge roll assembly MPF pick roll assembly ADF separator roll	CRU CRU	300,000 120,000

X83x	4036	12G4182	12G4184 40X0594 12G4072	Maintenance Kit 110-127V Fuser 110-127V Paperfeed Rollers (Qty: 3) Transfer Roller Assembly	CRU	300,000		
		12G6878	40X2540 12G6866	ADF Maintenance Kit Pick Roller Assembly Separator pad	CRU			
		12G4056		Roller assembly, Registration				
X85x	7500	40X0394	40X2503 40X0594 40X0616	Maintenance Kit 110-127V Fuser 110-127V Feed / Pick / Separation Roll Kit (Qty: 2) Transfer Roller Assembly	FRU	300,000		
		40X2734	40X2280 40X2273	ADF Maintenance Kit ADF Feed / Pick Roll Assembly Separation Roll Guide Assembly	FRU	150,000		
		40X0603		Multipurpose feeder pick roll kit				
		40X0605		MPF transport roll kit				
		40X0625		Registration roll assembly				
		40X0770		Feed unit roll kit				
		40X0792		Duplex media transport pinch roll kit				
		40X0793		Duplex media transport roll kit				
		40X2333		ADF registration roll assembly				
		40X2334		ADF feed-out roll assembly				
		40X2335		ADF exit roll assembly				
		40X2336		ADF transport roll assembly				
		X86x	7500	40X0394	40X2503 40X0594 40X0616	Maintenance Kit 110-127V Fuser 110-127V Feed / Pick / Separation Roll Kit (Qty: 2) Transfer Roller Assembly	FRU	300,000
				40X2734	40X2280 40X2273	ADF Maintenance Kit ADF Feed / Pick Roll Assembly Separation Roll Guide Assembly	FRU	150,000
				40X0603		Multipurpose feeder pick roll kit		
40X0605				MPF transport roll kit				
40X0625				Registration roll assembly				
40X0695				Media transport roll assembly kit				
40X0770				Feed unit roll kit				
40X1387				Transport roll kit				
40X2333				ADF registration roll assembly				
40X2334				ADF feed-out roll assembly				
40X2335				ADF exit roll assembly				
40X2336				ADF transport roll assembly				
Scanner								
4600				40X4755 40X2540		Separation Pad Pick Roller	CRU CRU	
6500				40X6446 40X6447		Pick Roller Separator Pad	FRU CRU	
NEW MODELS								
MS310/410	4514			No MK announced for MS310 nd MS410 but MS510 MK may be used on each.				